

MS851 Rugged Handheld Laser Scanner Quick Start Guide



Connecting the Scanner

Connect USB cable to the USB port of a host PC.



USB Device Type

HID Keyboard*



CDC (SPP)



Factory Default



Display F/W Version



Scan Mode

Trigger Mode



Continuous Mode



Host Mode



Pulse Mode



Blink Mode



Good Read

Good Read Beep Enable*



Good Read Beep Disable



Beeper Volume



Medium Volume *



High Volume



Beeper Tone

Low Frequency



Medium Frequency *
(Optimum Setting)



High Frequency



MS851 Rugged Handheld Laser Scanner Quick Start Guide

HID Keyboard Character Delay

1 ms*



20 ms

5 ms



50 ms



10 ms



100 ms



HID Keyboard Block Delay

10 ms*



500 ms



50 ms



1 Sec



100 ms



3 Sec



HID Keyboard Case

Auto Trace*



To Lower



To Upper



HID Keyboard Language

US English*

UK English





Swedish



French



ALT Mode



Danish



Spanish



Norwegian



Italian



Partial ALT



German



Japanese

