

# Hand Free Stand

## MS85x Series



Quick Start Guide

V1.0


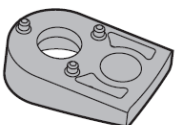
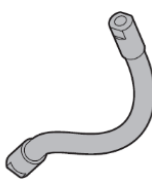
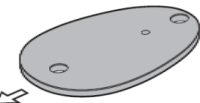
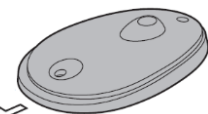
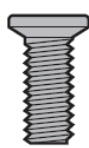

► Package

Please make sure the contents are in the Hand Free Stand box. If something is missing or damaged, please contact your Unitech representative.


► Getting Started

For detailed assembly steps, refer to the **Assembly Instructions**.  
When you receive the product, items 1-3 and 4-5 (see the **Package Contents**) are pre-assembled into two separate units. Simply connect them to complete the setup.

► The Package Contents

1. Scanner Holder	2. Spacer	3. Mounting Pole	A Phillips screwdriver is required for assembly.
 This Side Forward × 1	 × 1	 × 1	
4. Lower Base Plate	5. Upper Base Plate	6. Flat-Head Screws	7. Self-Tapping Screws
 This Side Forward × 1	 This Side Forward × 1	 × 2	 × 2

## ► Assembly Instructions

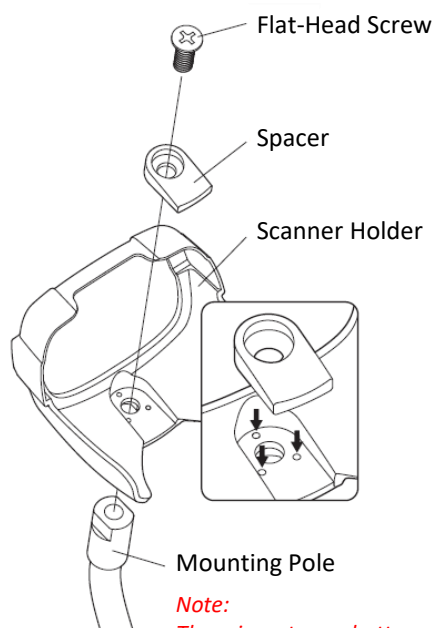


**Step 1**  
Insert the mounting pole into the scanner holder.

**Step 2**  
Attach the spacer to the scanner holder.

**Step 3**  
Secure the mounting pole, scanner holder,  
and spacer using the flat-head screws.

*Note:*  
This assembly is pre-installed prior to shipment.

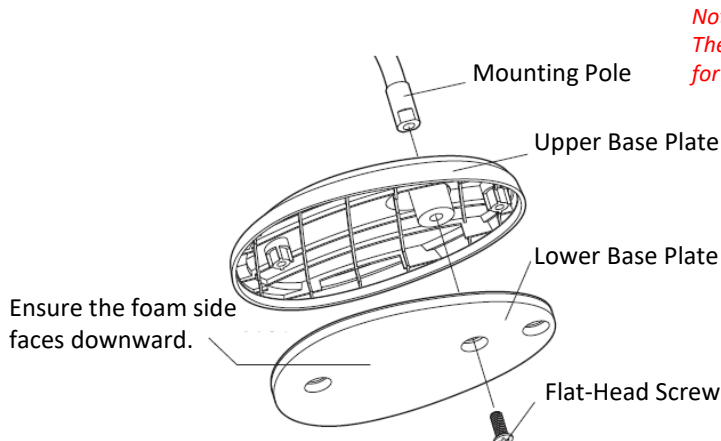


**Step 4**  
Insert the mounting pole into the upper base plate.

**Step 5**  
Attach the lower base plate to the upper base plate and secure it with  
flat-head screws.

(2)

(1)

(3)

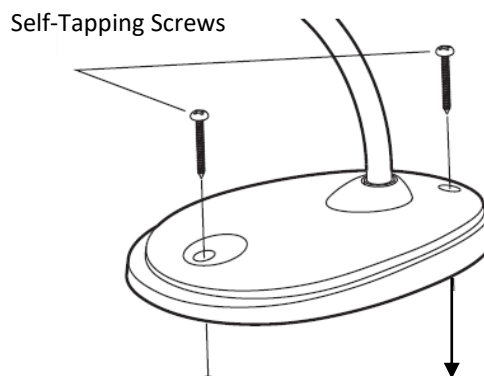

**Step 6**  
Use the provided self-tapping screws to secure the base to a mounting  
surface.

### CAUTION!

To ensure the unit working properly, please keep all connectors away from the contaminants such as dust, grease, mud, and water.

Negligence may cause the unit to lose communication, short circuit, or overheated. If the connector is damaged, please ensure the connector is fully repaired before using the unit to avoid short circuit.



<http://www.ute.com/>